

How to replace your wornout wood hatchway...





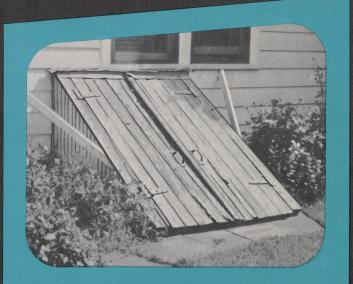

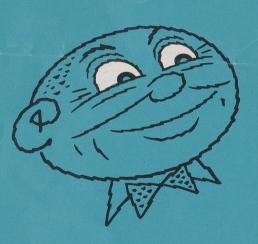

...with a modern all-steel



AMERICA'S FINEST BASEMENT DOOR


How to Measure for Replacement:



To determine the size BILCO Door you need to replace your wood hatchway, follow these 5 easy steps:

- Disregard dimensions of present wood hatchway.
- Measure width of the cellarway inside the masonry walls. This is the same as the width of the steps. (Dimension 1)
- Measure from outside of house foundation wall to inside edge of top step. (Dimension 2)
- Refer to overall dimensions of standard size BILCO Doors. Select the one which will overlap these masonry opening dimensions at least 2" or 3" all around. Of course, it may overlap more than that up to the maximum width of the masonry walls, which are usually 8".
- Overall height of BILCO should be sufficient to enclose inside door opening. (Dimension 3).

Note: If masonry opening does not conform to standard size BILCO Door, refer to special applications — page 5.

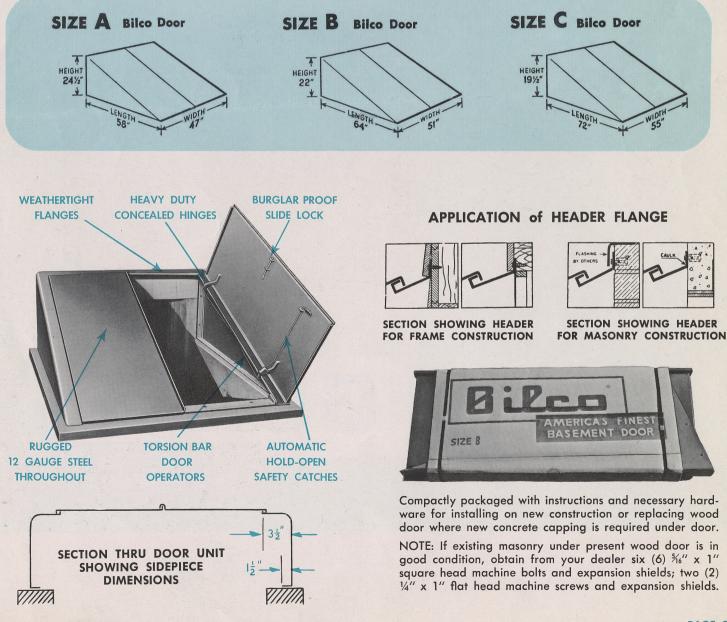

Printed in U.S.A., Copyright 1960, The Bilco Company, New Haven, Connecticut

Bilco



REMOVE WOOD DOOR

Removing your wood hatchway is the next thing to having it fall off by itself. Surprisingly easy, and in about 15 minutes, you should be ready for Step 2.



ASSEMBLE FRAME

Break steel strapping on BILCO package. Assemble frame in accordance with instruction sheet. A couple of minutes to tighten eight nuts and bolts and on to Step 3.



CUT OUT SHINGLES OR CLAPBOARDS

Fit BILCO tightly against house foundation by marking around back of frame. Cut out shingles or clapboards so you will have a snug fit (this step not necessary on masonry house).



REMOVE DOORS AND MARK HOLES

Remove torsion bars and take doors off frame being careful not to disturb alignment of unit. Mark masonry with pencil through holes in flanges.



REMOVE FRAME AND DRILL HOLES

Remove frame and drill holes with $\frac{5}{8}$ " star drill 1" deep. A carbide tip masonry drill and electric drill if you have them saves time on this step.



REPLACE FRAME AND FASTEN TO CONCRETE

Set shields in holes to receive bolts, replace frame, and tighten down to concrete.



ASSEMBLE DOORS TO FRAME

Put doors on frame and secure hinges with torsion bars provided—one in each hinge.



Check to see that doors line up and operate properly. If out of square, caused by uneven masonry, move unit to right or left to bring into alignment.

OF DOORS



Ĵ

INSTALL DOORS ON FRAME

Insert torsion bars in hinges and engage other end in accordance with the instruction sheet.





Caulk around base, in front of sill, and against house to insure weathertightness, using caulking compound supplied with door. Here you can follow, step by step, a typical wood hatchway replacement installation. The leaky, wornout door had deteriorated to the point where it was a constant source of annoyance. Also it had become dangerous for children and grownups who might walk on it.


Guided by the complete instructions included in the BILCO Door package, the average homeowner can accomplish this transformation in a few hours. A hammer, screwdriver, wrench and masonry drills are the only tools required.

Now, see the result.



Here's your finished job, the result of 3 or 4 hours pleasant work. Your family and friends will marvel at the improvement in the appearance of your home.

SPECIAL APPLICATIONS

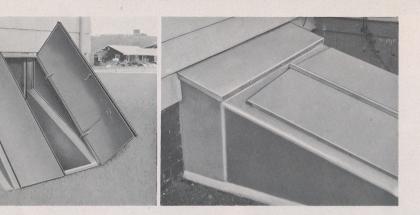

Here are typical BILCO Door installations showing how easily the units are adapted to odd size stair wells. In one, the door is raised to the height necessary to enclose the inside door opening. This type of installation applies to homes built on sloping lots and split level homes. The other shows an extension built against the house to enclose a stair well that is longer than the largest BILCO Door.

MORE HEIGHT

A BILCO can be raised to any required height in a few minutes by cutting off the backs of the side pieces with a hand hacksaw. To determine the cut line refer to the chart on page 6. Set door in place and pour concrete under it.

EXTENDED


When additional length is needed, an extension built against the house will bring the BILCO Door out sufficiently to enclose the stair well. Such extensions usually are brick or masonry blocks on each side covered with a piece of light gauge metal formed to flash against the house and down over the header flange.

RAISED AND EXTENDED

When a BILCO Door is extended, it is sometimes necessary to raise it a little to allow sufficient head room when entering or leaving the basement. This installation is a combination of the two above.

CORNER INSTALLATION

A BILCO Door is installed in a corner by drilling three or four holes along the sloping edge of the side piece so it can be fastened tightly against the wall with lag screws. A coat of metal enamel should be applied to this side before it is put in place. The joint is then caulked to prevent water from seeping down between the side piece and the house.

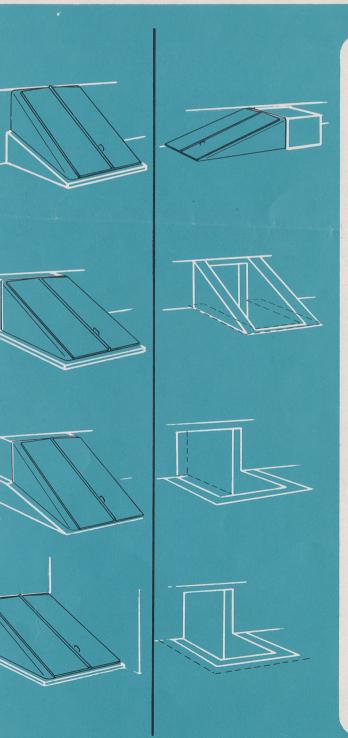

PARALLEL INSTALLATION

Homes with open stair wells that run parellel to the house can be enclosed with a BILCO Door by building a permanent enclosure at the back. The side piece is fastened to the house wall in the manner described under "Corner Installation". The enclosure is usually masonry blocks covered with metal.

SLOPING WALLS

If your wood hatchway rests on top of sloping masonry walls, these can usually be quickly removed with a sledge hammer to grade level or a little below. Set the BILCO Door in place using anchor bolts provided and pour a new concrete cap under it.

OPENING TOO WIDE

When the width of the masonry will not allow enough overlap to fasten down the $1\frac{1}{2}$ " flanges, it should be reduced. This can be done by building a concrete cap that extends into the opening on one or both sides or by building up a course of concrete blocks on the inside of one or both side walls.

OPENING TOO NARROW OR TOO SHORT

When the overall width or length of the BILCO Door goes beyond the present masonry pour a little additional concrete along the side or across the front to support the door.








HOW TO INCREASE THE HEIGHT OF THE BILCO DOOR

The standard height of a BILCO Door will usually be adequate if your home is on a fairly level lot. When the inside door is higher, this handy chart and diagram will enable you to quickly determine the amount to cut off the backs of the sidepieces. As the BILCO is raised, the length is reduced and this dimension is also shown. New concrete is then poured to fill the triangular opening under the door.

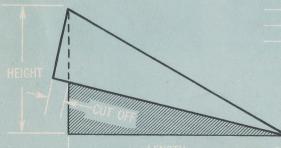

Breaking Through Foundation

If your home was built without the convenience and safety afforded by an outside stair well, installing one will give you a whole new concept of basement living. It's a must for easy storage, a well equipped, practical workshop, a rumpus room that's easily accessible from out of doors and safe should fire block the inside stair.

Usually a job for a contractor, building an outside stair well topped with a modern BILCO Door is a project often done by the homeowner himself. These photos will give you the idea. Construction of the areaway is covered in the installation instructions supplied with the BILCO Door. For simplicity and economy, BILCO Stair stringers are recommended instead of masonry steps.

•	SIZE A		SIZE B			SIZE C		
HEIGHT	LENGTH	CUT OFF	HEIGHT	LENGTH	CUT OFF	HEIGHT	LENGTH	CUT OFF
241/2	58	0	22	64	0	191/2	72	0
261/2	57	7⁄8	24	63	5⁄/8	211/2	711/2	%16
281/2	56	1 3/4	26	621/2	1 3/8	231/2	70½	11/8
301/2	55	2 5/8	28	611/2	21/8	251/2	70	1 5/8
321/2	531/2	31/2	30	601/2	27⁄8	271/2	69	21/8
341/2	521/2	41/2	32	591/2	35%8	291/2	681/2	23/4
361/2	51	51/2	34	581/2	43/8	311/2	671/2	33/8
381/2	491/2	6½	36	57	51/8	331/2	661/2	4
401/2	48	71/2	38	56	57⁄8	351/2	651/2	45/8
421/2	461/2	8 5/8	40	541/2	63/4	371/2	641/2	51/4
441/2	441/2	10	42	53	73/4	391/2	63	57⁄8
461/2	42	111/4	44	51	83⁄4	411/2	62	6½
481/2	40	123/4	46	491/2	93/4	431/2	601/2	71⁄4
501/2	37	141/2	48	471/2	107⁄8	451/2	59	8
521/2	341/2	16¼	50	451/2	12	471/2	571/2	87⁄8
541/2	31	181/2	52	43	13¼	491/2	55½	9 ³ /4 ·
561/2	271/2	211/4	54	401/2	14¾	511/2	54	101/2
581/2	23	24%	56	38	16%	531/2	52	111/2
			58	35	18¼	551/2	491/2	121/2
			60	311/2	201/2	571/2	471/2	13¾
			62	27	23¾	591/2	45	15
			64	22	271/8	611/2	42	163/8
						631/2	39	181⁄8

 27
 261/8

 211/2
 311/4

36

32

651/2

671/2

69½ 71½

Form No. RF-150

201/8

22 %